Rose Knows

AnoFrame™ with Off-the-Wall Brackets

Instruction Sheet

A

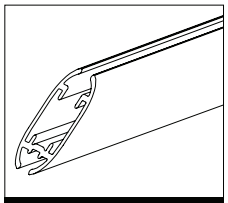

4
Full Rails
12A300

B

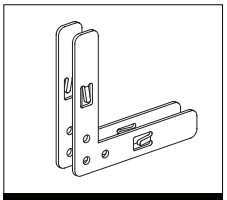

4 Pairs
Brackets
06-2935

C

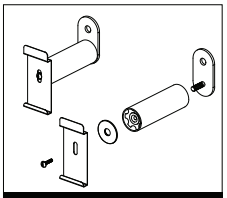

4
Off-the-Wall
97-0471

D

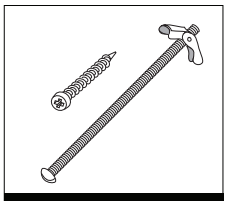

4
Hardware Kits
97-0419

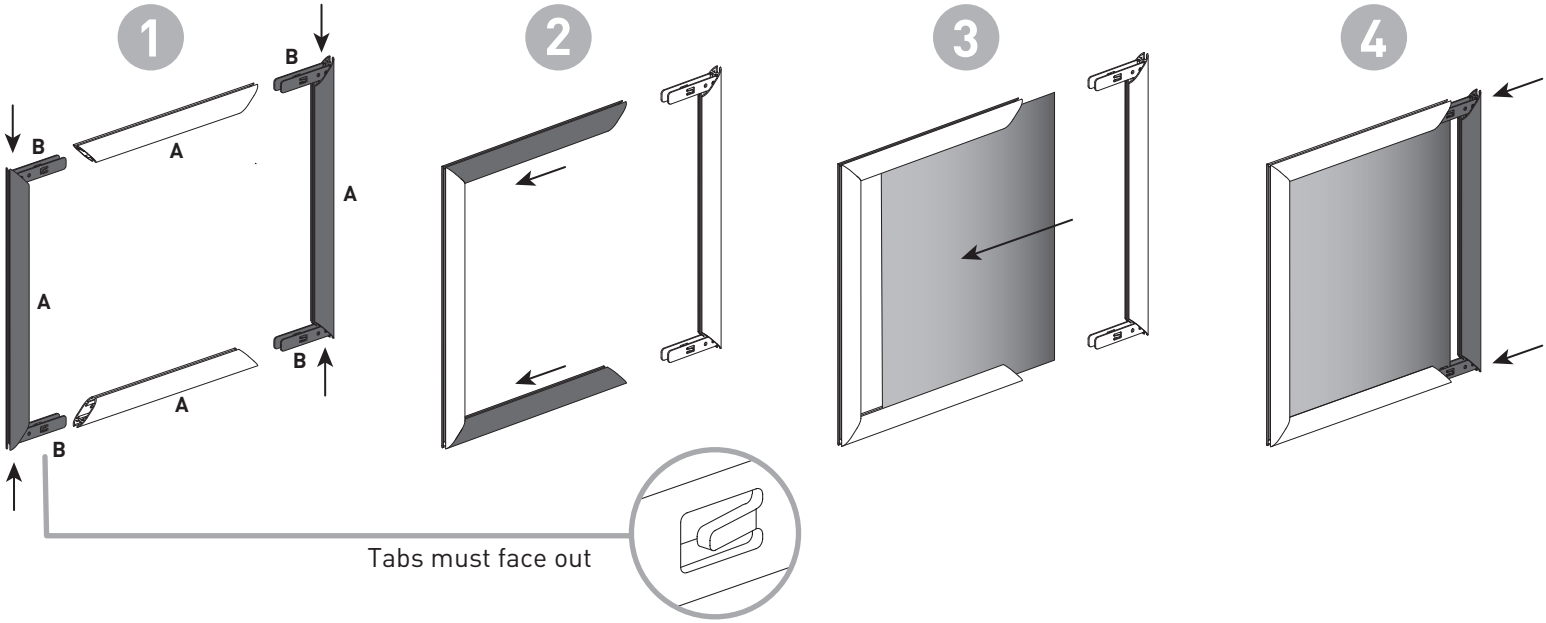

Measure and level Off-the-Wall Brackets then screw into wall at frame corners.

Use 1 inch wood screw for wood and other solid surfaces. Use 3 inch toggle anchor for drywall and other hollow surfaces; predrilling 3/16" hole is necessary.

Once frame is hung, if it is slightly crooked: simply loosen the bracket screws, adjust up or down to straighten frame and re-tighten screws.

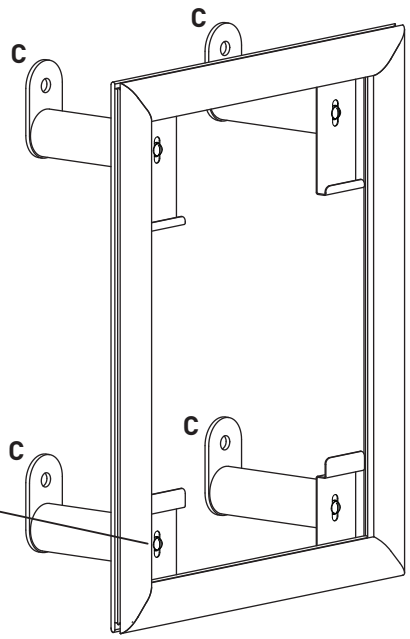

Hanging Top of Frame

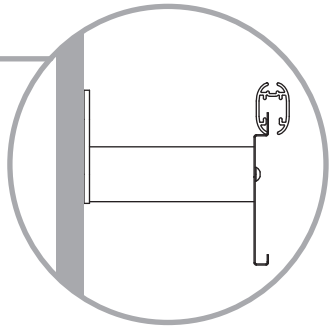

Hanging Bottom of Frame

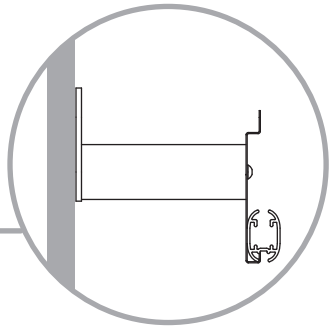

AnoFrame™ is a trademark and Ano® is a registered trademark of Rose Displays, Ltd.
Neither the manufacturer nor any sales agent may be held liable for injury, loss or damage resulting from the use of these products.
Part #09INSAnoFrameNoLoadOffTheWall

35 Congress Street, Salem, MA 01970 | T. 800.631.9707 | F. 978.825.0096 | signware@rosedisplays.com

rosedisplays
The Signware Specialists™